



1. Select [Menu] → [Plugins]

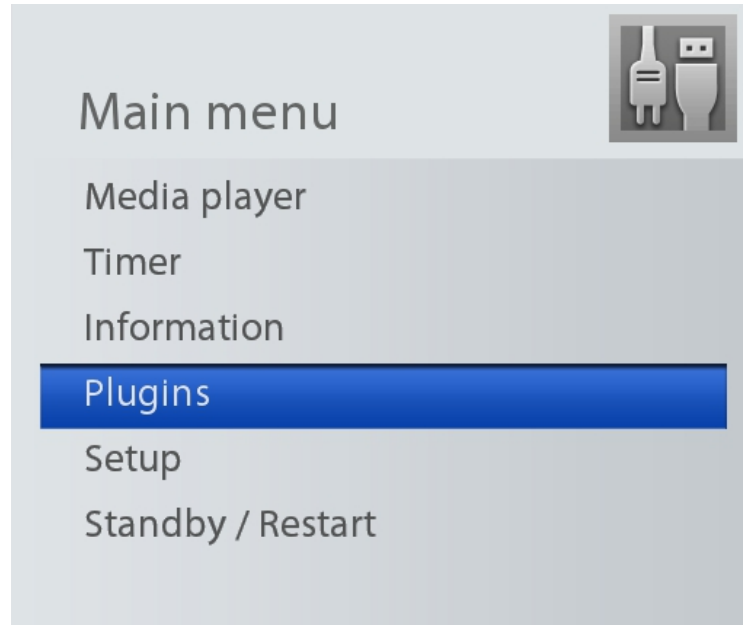


<Fig1. Menu>

2. Launch “Firmware Upgrade”

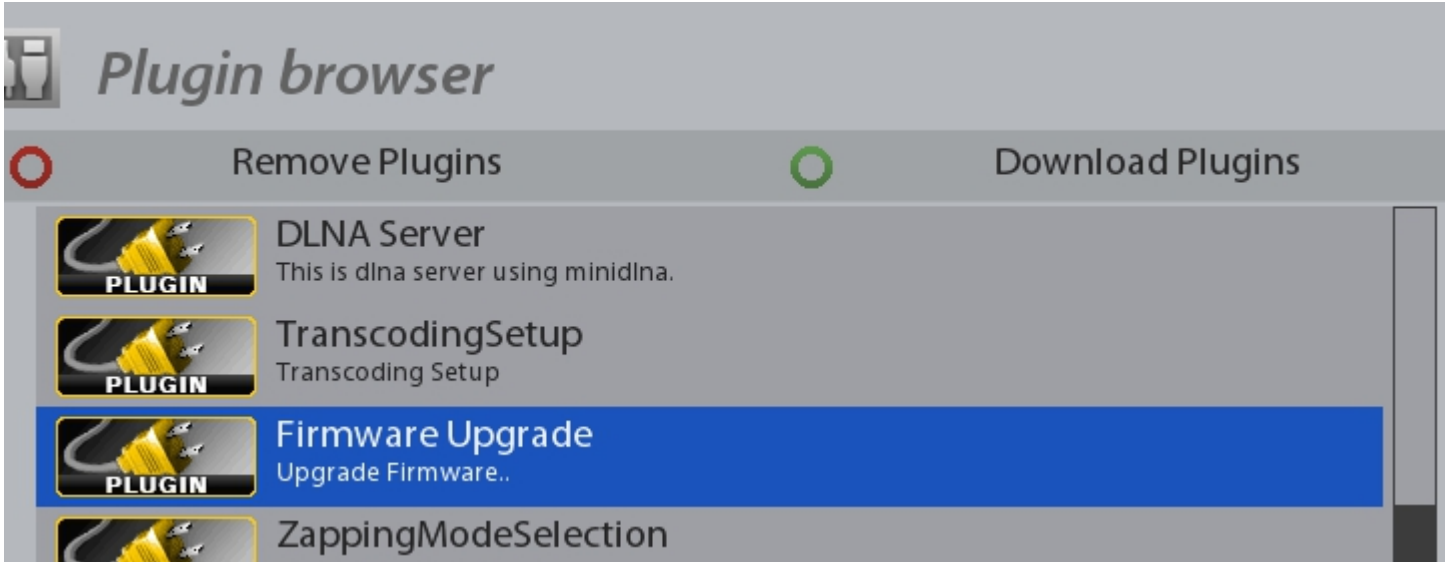


<Fig2. Plugin Browser>

3. Change “Firmware” to “VFD Controller” and then Press [Green] or [OK] key

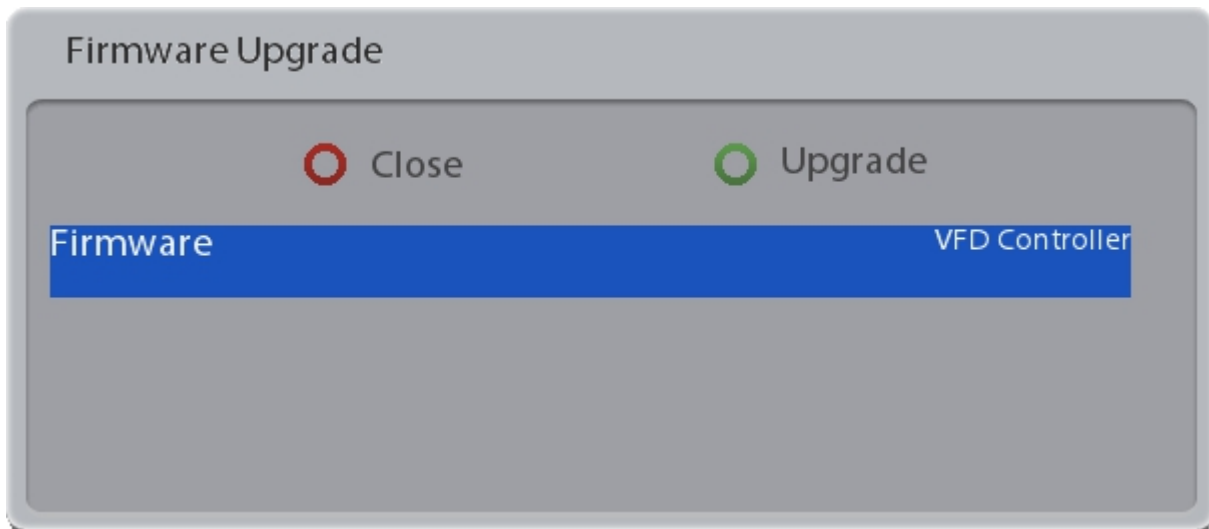

<Fig3. Select Firmware Type>


4. To start download from internet, Press [Blue] key

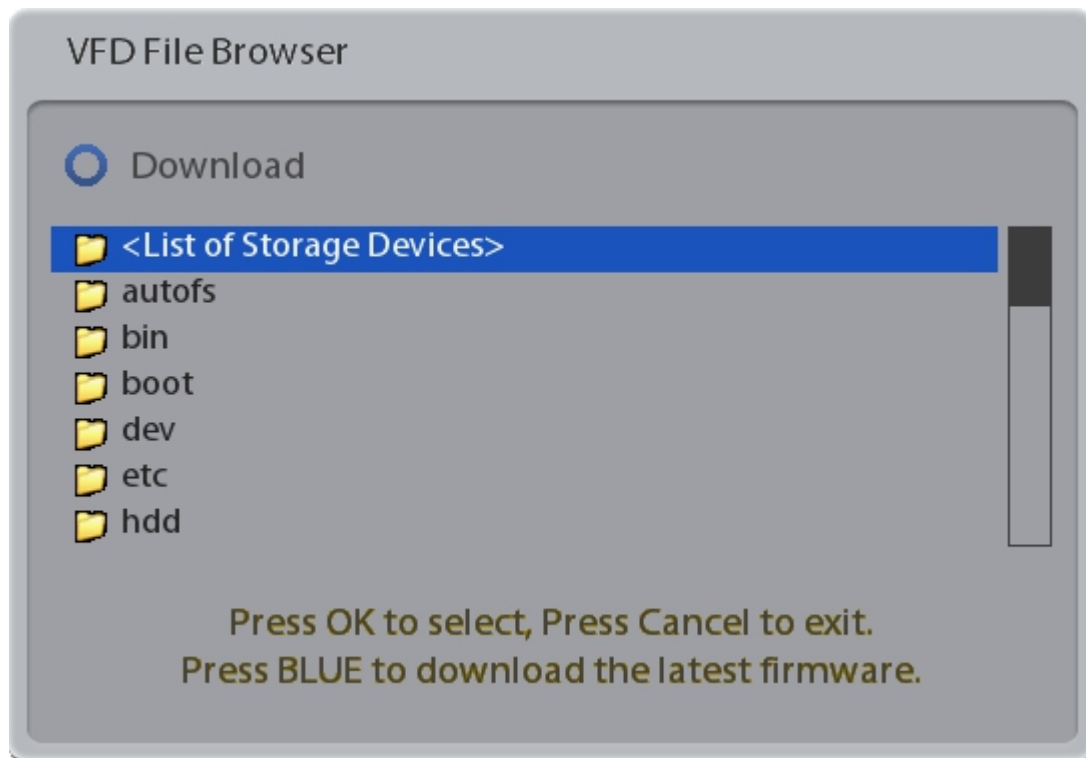


<Fig4. File Browser>

5 Fig 5-0 : download starts

Fig 5-1 : download is complete. Select duo2.vfd.bin and press OK

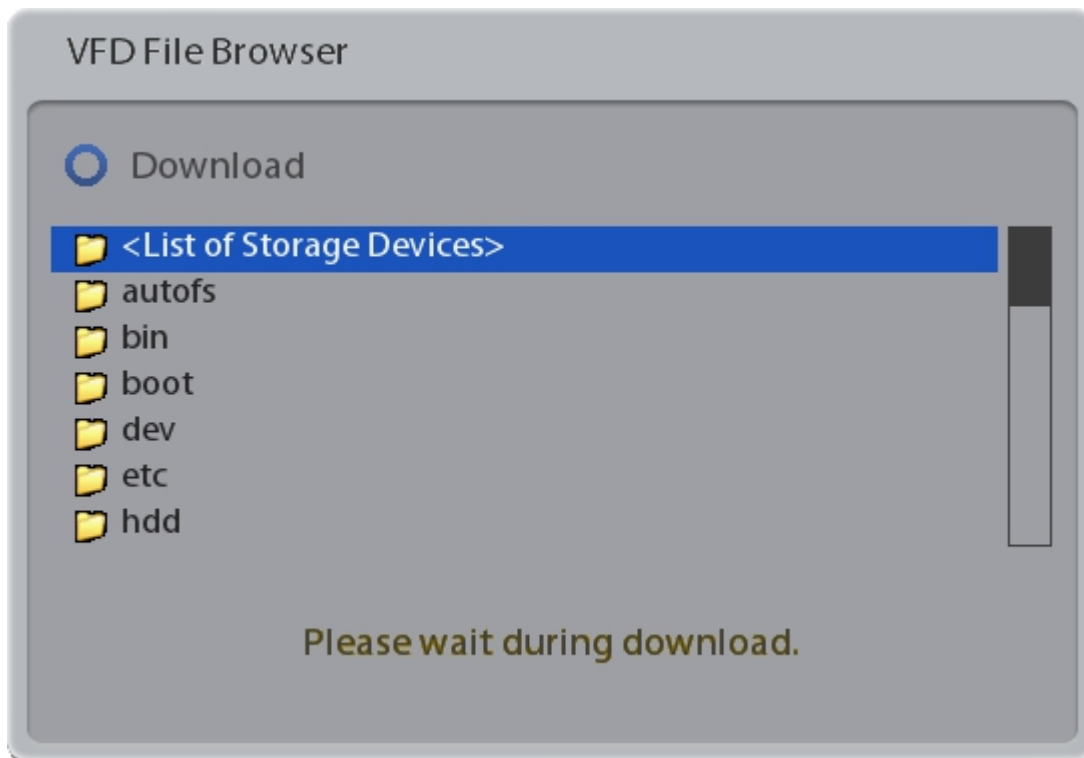


<Fig 5-0. Starting download>

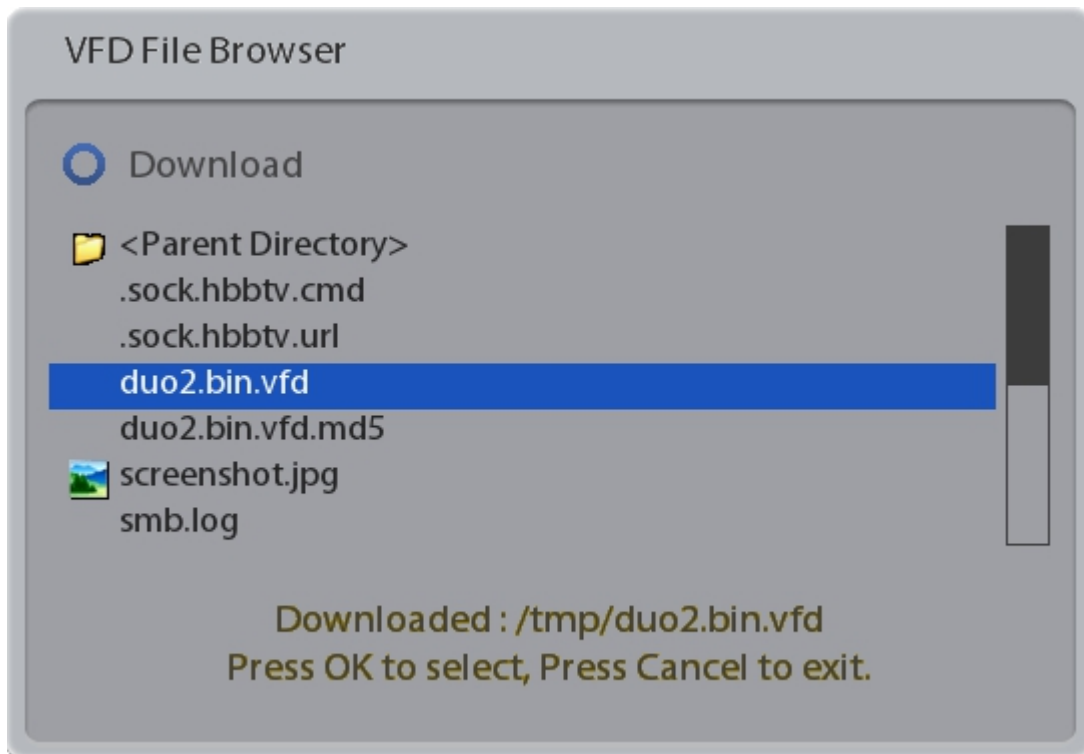


<Fig 5-1. Download is complete>


6. Choose Yes in Fig 6-1.

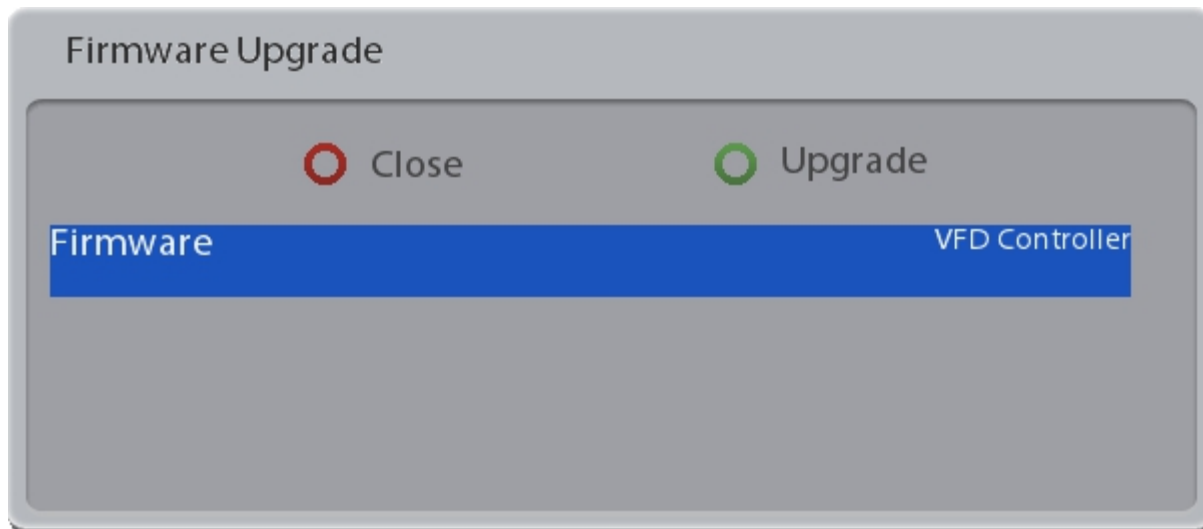

<Fig 6-0. Starting upgrade>

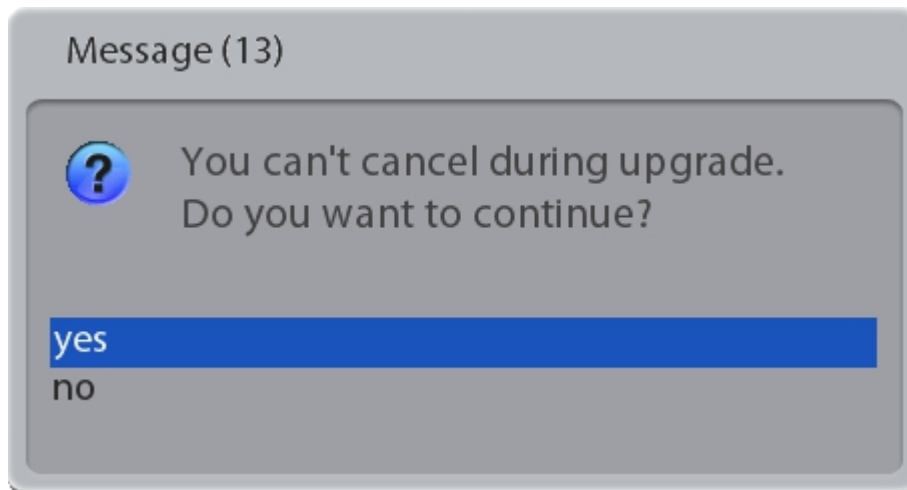


<Fig 6-1. Upgrade>

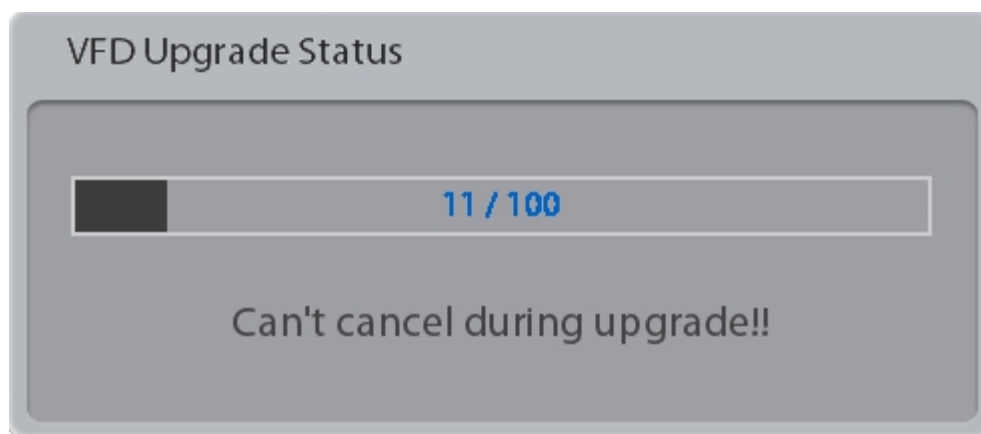


<Fig 6-2. Upgrade progress screen>

7. Once upgrade is complete, press [OK]

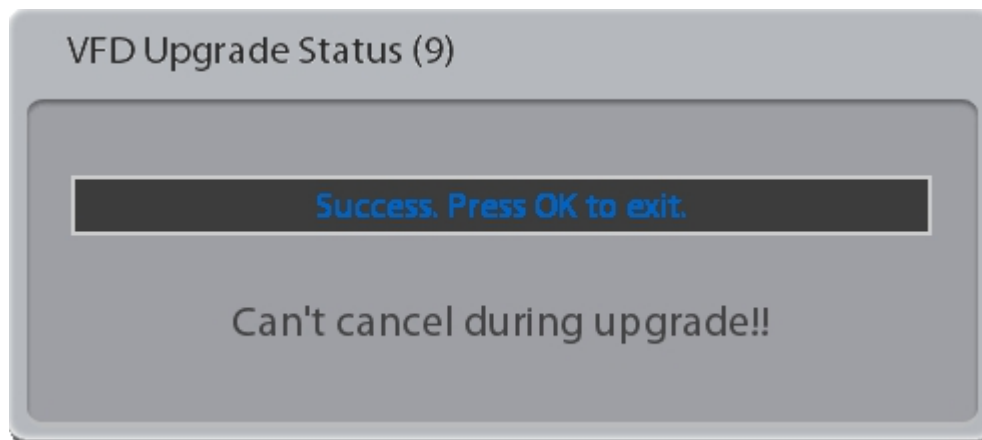


< Fig 7. upgrade complete >

8. You can remove temporary image file in Fig. 8

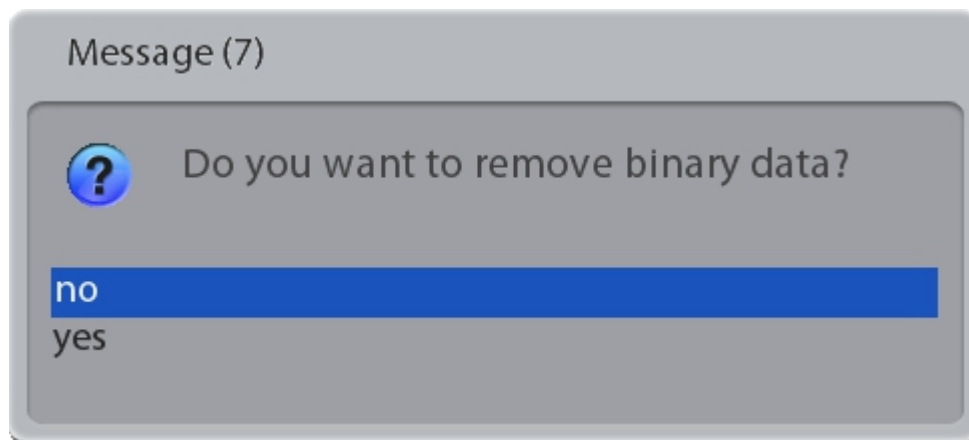

<Fig 8>

9. Once finished, STB will reboot automatically

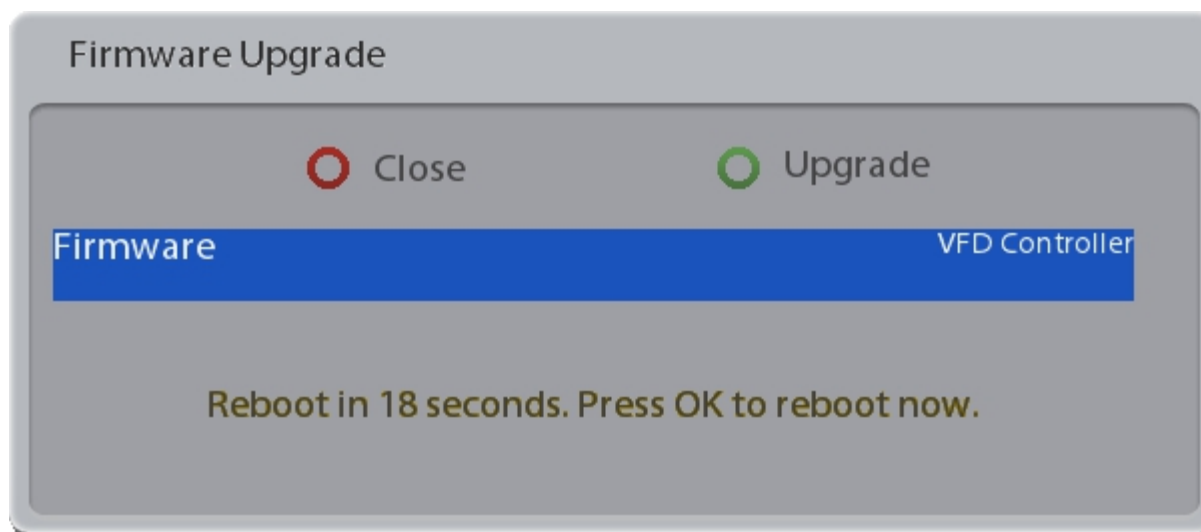

<Fig 9. Finished.>